



MOTORTREND

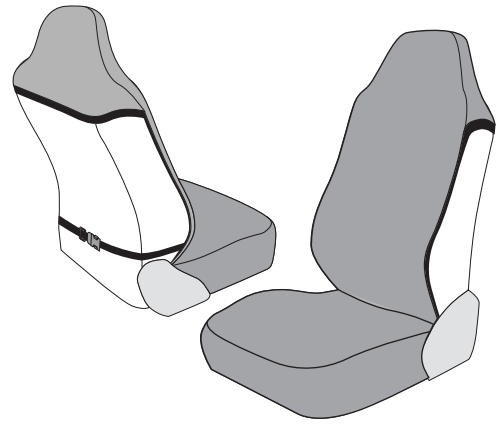


HIGH BACK SIDELESS SEAT COVERS WITH BUILT-IN HEADRESTS

INSTALLATION GUIDE / GUIA DE INSTALACIÓN

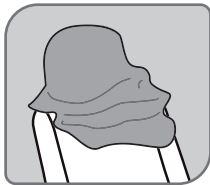


1. Move the headrest to the lowest position and start sliding the cover over the top.

Reduzca la altura de las cabeceras y deslice la funda desde arriba.

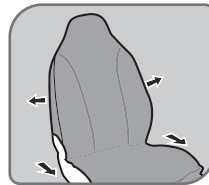

2. Align the cover with backrest seams and pull outward and down snugly over the cushion.

Continúe deslizando la funda sobre el respaldar de forma que alinien las costuras. Siga hasta cubrir toda la base.

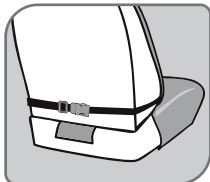

3. Insert the crevice push bar in the middle of the seat and pull it from the back.

Inserte la barra central por en medio del asiento y ajústelo jalándolo desde atrás.



4. Pull and connect cushion elastics behind or below the seat. Don't hook onto cables or connectors.

Conecte los elásticos de la base por debajo o detrás del asiento. No enganche sobre cables o conectores.

WARNING: This product has been designed and tested to be compatible with side impact airbags. However hasn't been tested with all vehicle models and years. For some vehicles the seat cover may affect the operations of the mounted side airbag system, which could increase the change of serious injury in case of an accident. Check manufacturer manual and air bag position before installing this product on your vehicle.